

Assembly
Instructions



RSG-1000 / RSG-MH / RSH-AEH



RSG-1000




RSG-AEH



RSG-MH

1.

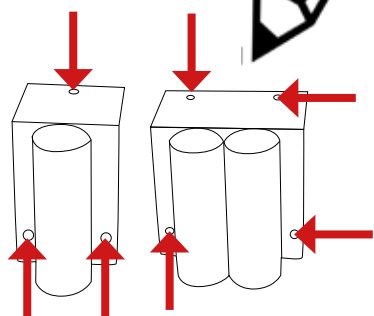

2.



3.



4.

